

目录

尊敬的用户：

感谢您购买遥控打窝船！

每一个用户的信赖，如同每一滴朝露，至清至明，每一滴都是我们最宝贵财富，我们珍惜亦不辜负这份至真至纯的信念！

我们的每一只打窝船，都是一个独立的生命，是与众不同的宝贝。我们的打窝船是从细节出发，每一处设计，每一个配件，都经过一次次的琢磨，卓越的工艺，细致专注的技术，我们不断孕育着新的惊喜。坚持不懈精工细作，致力于将钓鱼的轨迹融入到设备中，陪您感受每一次垂钓的乐趣。我们都拥有温暖快乐的眼神，为每一只打窝船注入了自由精致的生活理念。我们是汕头市飞鹰科技有限公司，我们拥有自由快乐的灵魂，我们想钓鱼.....从产品到服务，我们始终追求为您提供全方位的舒适贴心感受，让您在生活以及出行中能够更得心应手的应对遇到的情况。由此，汕头市飞鹰科技有限公司特别推出本产品手册，并可提供丰富优质的增值服务和独特的商务解决方案，协助您轻松畅游在高山流水间快乐垂钓。您的快乐是我们最大的期许！

我们衷心感谢您对我们的厚爱，并希望您一如既往的支持我们，您对我们的信赖就是我们的动力源泉！我们讲继续秉持“主动”、“完备”和“迅速”的服务理念，为您提供更优质、更贴心的服务。

“渔”悦生活由我智创

“渔”悦生活由我智创

产品特色介绍：

- **材质过硬**
船体采用ABS工程塑料，无毒、无味，兼有硬、刚的特性，有超强的抗冲击力和耐磨性不易磨损，抗划痕性强，能长期保持如新的色泽，还具有很好的抗化学污染性，更易于清洁！
- **专用数码自动调频装置**
专用电路和专用数码自动调频遥控装置，彻底解决多条船航行时相互干扰，遥控距离近、失控捞船等麻烦！
- **抗风性强**
流线型船体设计，整船做了防水处理，能有效防止各渗透漏水现象，3-4级风照常行驶！
- **续航能力强**
低噪音、低耗能，可连续航行2小时以上！
- **续航能力强**
操作简单、稳定性强、无极变速，前进、后退、左右转弯灵活自如！
- **携带方便**
强劲把手，携带方便！

配件介绍：

- **马达**
转弯半径0.8-1.0米
- **电池**
电源：7.4V×5200mAh免维护电池，可连续工作2小时以上，报警设置：缺电报警设置，确保遥控船安全返回；
- **夜航灯**
夜航指示灯帮助钓鱼者在夜晚操作时能辨别航行方向，并起到诱鱼的效果。
- **遥控器**
遥控距离400-500米。
- **船体**
动作：前进、后退、左右转弯，抛洒鱼饵拖带投放鱼饵。控制灵敏精准，并可抗击3-4级风浪。

“渔”悦生活由我智创

“渔”悦生活由我智创



船体俯瞰细节说明



“渔”悦生活由我智创

“渔”悦生活由我智创



“渔”悦生活由我智创

“渔”悦生活由我智创



“渔”悦生活由我智创

“渔”悦生活由我智创



“渔”悦生活由我智创

“渔”悦生活由我智创



“渔”悦生活由我智创

“渔”悦生活由我智创



“渔”悦生活由我智创

“渔”悦生活由我智创



Contents

I. Product Feature Introduction.....	1
material/digital FM/resistance wind and wave/lasting/operation and carry	
II. Accessories.....	2
motor/battery/night light/remote controller/boat body	
III. Boat Body Introduction.....	3
bin plane details	
IV. Remote Controller Details.....	6
V. Maintenance	7
VI. Fault Detection and Solutions.....	8

Dear users:

Thanks for your buying of the remote control fishing bait boat with two motors. Your kind trust for us is a great motive, we will keep moving to supply the best item to you. Every boat is with an independently life. We pursue the best quality through the strict production and controlling. We are seeking the happy fishing from the product to service. So our company make this manual for your reference. Your happy is the best for us. "

“FISH” IS A LIFE OF MY LIFE

Feature Introduction:

- ◆Best Quality
The boat adopts the ABS which is without the poison and smell, the ABS is with the strong anti-resistant and abrasion resistance, the boat color can be kept a long time. It is easy to clean as the ABS can beat the chemical pollution.
- ◆Professional Digital Full Automatic FM Device
It can solve the problems: interference of different boats' frequency; short distance of remote controlling; pick up the boat when it is out of control.
- ◆Resistant the Strong Wind and Wave
Two motors with the waterproof design, which can stop the water through the boat, and also can run well under 3-4 level wind.
- ◆Long Battery Life
Simple operation, strong stability, change the speed and direction easily.
- ◆Carry Easily
It is easy to carry with the boat handle.

1

“FISH” IS A LIFE OF MY LIFE

Accessories Introduction:

- ◆Motor
turn radiusturn radius 0.8-1.0M
- ◆Battery
power: 7.4V 5200mAh, maintenance-free battery, battery life is above 2 hours
alarm: setting for low battery to ensure the boat back safely.
- ◆Night Light
the night light can help to distinguish the direction and lure the fish
- ◆Remote Controller
remote control distance above 400M-500M
- ◆Boat Body
direction: forward, backward, right and left turn, release the bait flexibly and precisely, can resist the wind under 3-4 level.

2

“FISH” IS A LIFE OF MY LIFE

◆Charging fastly

Two bins design :

1. Every bait bin can be controlled independently.
2. The night light is designed with the blue color.

Functions:

- ① can help know the direction during the night fishing
- ② lure the fish

- ◆loading weight 1.5kg



3

“FISH” IS A LIFE OF MY LIFE

Boat Body Introduction



4

“FISH” IS A LIFE OF MY LIFE

Streamline boat body

- ◆running more stable
- ◆Resistance to the wind and wave more strong

(The battery is built in the hull.)
7.4V*5200mAh high capacity battery

- ◆Fast charging
- ◆Long battery life



5

“FISH” IS A LIFE OF MY LIFE

Remote Controller Details



6

“FISH” IS A LIFE OF MY LIFE

FREQUENCY MATCH METHOD:

- ◆As Picture shown below, long press the frequency button① and not unlock, open the boat power switch, then turn on the remote controller switch key ②, when controller sends a long "drop ~" sound, controller and the boat are in the frequency matching state, then it can be used. This operation step must be completed in 3 seconds.

◆Note: This frequency mode is suitable for the case where the remote controller does not respond when operating the boat or if the consumer replaces the boat circuit board or the controller circuit board.

INSTRUCTIONS:

- ◆Remote controller instructions forward, backward, turn left, turn right.

◆Detailed description


- ① Push both directional rods up at the same time, the boat forward.
- ② Push both directional rods down at the same time, the boat backward.
- ③ Push the left directional rod down and push the right directional rod up at the same time, the boat turns left.
- ④ Push the left directional rod up and push the right directional rod down at the same time, the boat turns right.



7

“FISH” IS A LIFE OF MY LIFE

◆Operation instruction picture

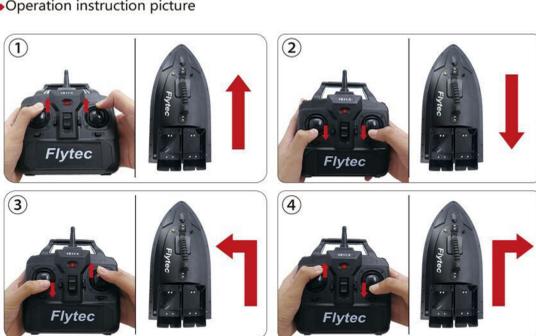

8

“FISH” IS A LIFE OF MY LIFE

Maintenance

- ◆Controller
please kindly take out the battery if there is a long time for leaving unused.
- ◆Night Light
Turn off the night light switch when not in use for a long time.

◆Boat Body

1. please keep dry and clean for the boat after using the boat.
2. When you not use it for a long time, please cut off the power supply.
3. please do not put the boat with the corrosive liquid.
4. Don't use or leave the battery near a heat source such as fire or heater.
5. please put the boat into the bag to keep the boat from the dusty if do not use the boat.



9

“FISH” IS A LIFE OF MY LIFE

Fault Detection and Solutions

◆ What should I do if the switch is not powered?

Analysis and solution:

1. First check the battery to see if it has power or not. If there is no power, first charge it, and then operate it after charging (Figure 1).
2. It may be the charging port in the battery compartment is not in good contact with the connecting cable. You can touch the connector to see if this phenomenon occurs. If the connection is not good, you can tight up the connection between the charging plug and the cable, or pinch the charging port with your hand or pliers and then insert the connector. (Figure 2).
3. If there is still not worked after first two solutions, Please unscrew the cover of the boat to check the internal situation. The product may have some uncertainties happened during transportation, causing the connection line and the circuit boards are loose, which lead to the boat doesn't work. If you find that is loose, please put it in place (Figure 3), then turn on the switch to confirm the power supply is normal or not. If you still can't solve the problem, please contact local dealer or e-commerce customer service to ask for help.



10

“FISH” IS A LIFE OF MY LIFE

◆ Hopper can't work

Analysis and solution:

1. Try to turn on the switch of the bait hull (Figure 4), see if there is any sound from the steering gear. Also to check the pull-in and pop-up action of the pull rod (Figure 5). If the action is normal, then the pull-in action is not in place, you can use the diagonal pliers to cut a little bit of the front end of the pull rod (The length of cutting depends on the situation) (Figure 6).
2. If the steering gear reacts, but the pull rod does not respond. You can open the upper cover of the boat to check if the connecting chain of the steering gear and the pull rod is too long or not, or maybe it is disconnected. If it is this situation, just cut a little bit or reconnect it well (Figure 7).
3. If the steering gear does not work, you can open the upper cover of the boat and check if the connecting line between the circuit board and the steering gear is loose or not. If it is loose, connect it and that can be solved (Figure 8).



Figure 4

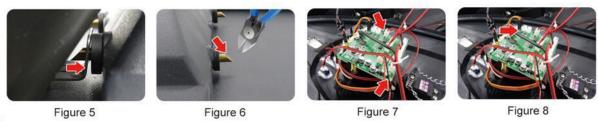


Figure 5

Figure 6

Figure 7

Figure 8

11

“FISH” IS A LIFE OF MY LIFE

◆ Remote control rod shedding

Analysis and solution:

1. The joystick may be squeezed during transport, causing the assembly to be out of position. Press down slightly until the joystick automatically returns to the middle position (Figure 9).

◆ The hopper bounces automatically

Analysis and solution:

1. It can be adjusted by turn the switch on and off. The turn on process cannot be so quickly and frequently, please turn it after three seconds or more. It will be normal after repeated several times (Figure 10).
2. If the above operation method does not work, can adjust the steering gear and pendulum. The steering gear has a power-on automatic reset function. After the power is turned on, it will return to the middle position. The steering gear will rotate left and right once and the pull rod will be driven, causing the silo to be bounced. During the production process, the production personnel will debug the pendulum to the best condition, and the silo will not be bounced normally. If it is still bouncing, open the cover and loosen the pendulum screw. Move the pendulum lever to the position to solve it (Figure 11).



Figure 9

Figure 10

Figure 11

12

“FISH” IS A LIFE OF MY LIFE

◆ Unable to charge

Analysis and solution:

1. Check if the charger is working properly (Figure 12).
2. Check if the charging port is connected correctly, and then check if the interface is poor contact (Figure 13).



Figure 12

Figure 13

Figure 14

- ◆ If the controller and the boat are on power, controlling the remote controller, the boat does not respond. You need to match controller and boat. Long press ①, turn on the boat, and then open ② (Figure 14), the operation needs to be completed in 3 seconds. When the controller makes "beep" sound, it means the controller and boat match successful.

- ◆ More details of the fault repair video, please check out our website: <http://www.iRctoy.com>

13

“FISH” IS A LIFE OF MY LIFE

Accessories Introduction



2011-5.201 Propeller Cover

2011-5.002 Antenna

2011-5.203 Bait Box Set (Green)

2011-5.204 Bait Box Set (Black)

2011-5.005 Boat Handle

2011-5.206 Battery Cover

2011-5.007 Switch Accessory

2011-5.208 Forward Motor (Right)

2011-5.209 Reverse Motor (Left)

2011-5.009 Battery

2011-5.010 Boat Circuit Board

2011-5.011 Controller Circuit Board

14

“FISH” IS A LIFE OF MY LIFE



2011-5.012 Controller

2011-5.013 EU Plug Charger

2011-5.014 US Plug Charger

2011-5.015 UK Plug Charger

2011-5.016 LED Light Set

2011-5.217 Steering Gear Set



15

16